Redland

Rapid Range Gas Flue Conversion Roll (9486)
FIXING INSTRUCTIONS

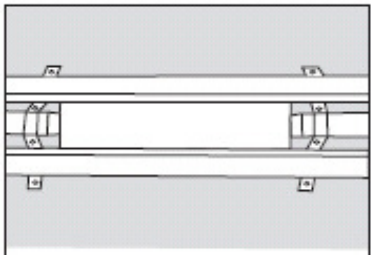

1. Underlay and batten the roof as normal. Locate rafter centre where the Gas Flue is to be fixed and cut out a 400mm section of the ridge tree. For Rapid Ridge, cut a hole in the underlay 350mm x 75mm.

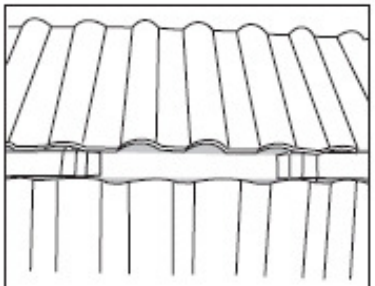

2. Tile the roof in the normal manner. Ensure top course of tiles is mechanically fixed.

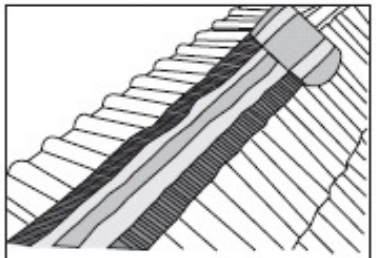

3. Roll out the rollable membrane as per the instructions, in the Rapid Ridge/ Rapid Vented Ridge pack.

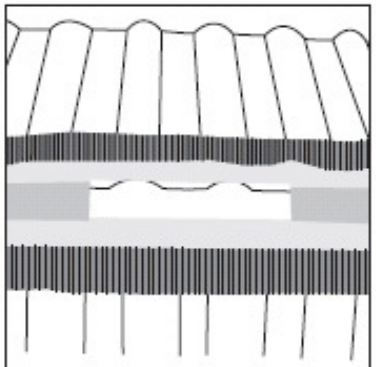

4. Cut a 350mm x 75mm hole in the rollable membrane directly in line with the hole cut in the underlay i.e. in between the cut ridge tree.

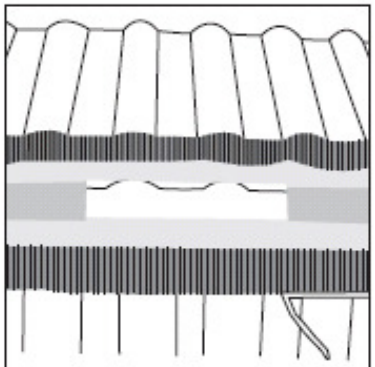

5. The rollable membrane can now be stuck in place.

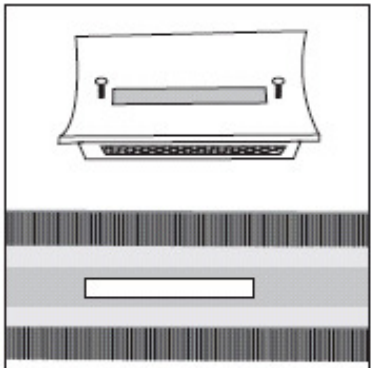

6. Turn the Gas Flue Terminal upside down so the threads are facing upwards. Then roll out the Rapid Ridge Gas Flue Conversion Roll and locate the two holes either side of the cut out.

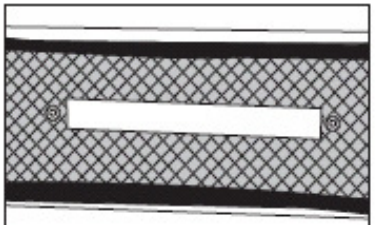

7. Ensuring that the side of the Gas Flue Conversion Roll with the tapes is facing towards you, insert the Gas Flue Conversion Roll over the two threads as shown above.

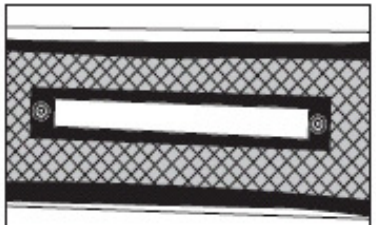

8. Locate the seal over the two threads and slide down onto the Gas Flue Conversion Roll.

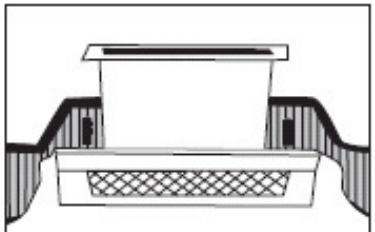

9. Offer up the Extension Adaptor to the Gas Flue and fix onto the threads. Using the nuts and washers provided, screw the Extension Adaptor on tightly.

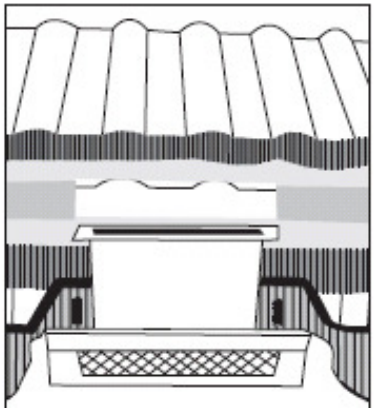

10. Insert extension adaptor through slot in rollable membrane and rest in position.

April 2008

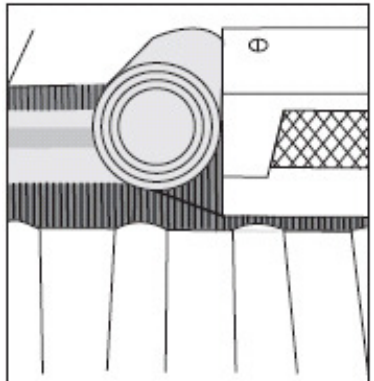

11. Roll out the Rapid Range Gas Flue Conversion Roll over the rollable membrane .

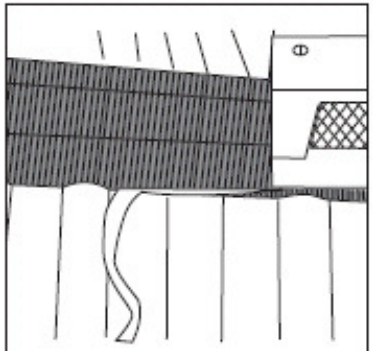

12. Firmly stick the Rapid Range Gas Flue Conversion Roll onto the rollable membrane .

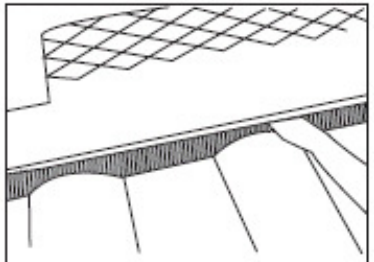

13. Ensure that the Gas Flue Conversion Roll is stuck down along its whole length.
Note: By resting the Gas Flue Terminal in position you can lift the ridge slightly to gain access to the Rapid Range Flue Conversion Roll to stick in place. Continue by installing the remaining ridge tiles as per instructions.